


展开尺寸：285x210mm 成品尺寸：95x210mm 128g书写纸双面单黑印刷 荷包折


封面


封底



HomeBasic


Essential Luxury

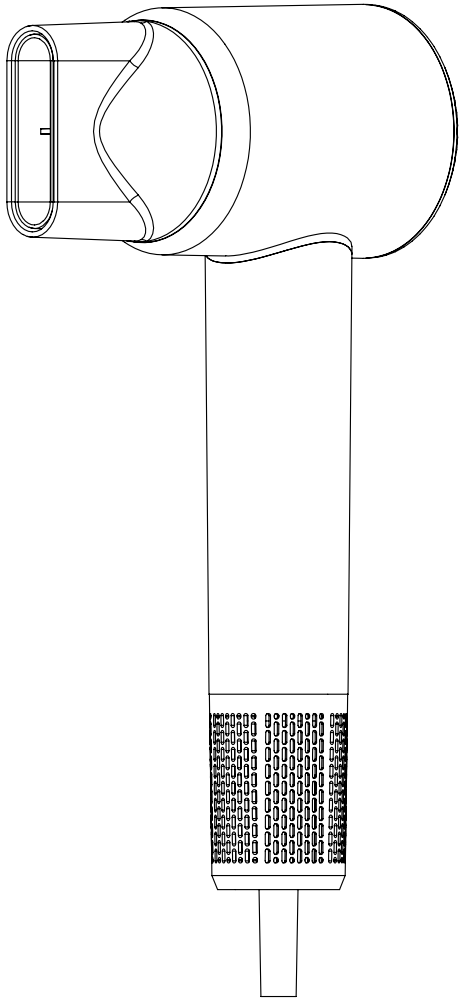



**WARRANTY
REGISTRATION**

Experience the HomeBasic difference: durability and dependable service. Our products are engineered for longevity and backed by a comprehensive warranty.





SCAN ME


Don't hesitate to contact us! We're happy to answer your questions. Prefer email? Send your questions to **support@thehomebasic.com**. Need to speak with someone? Call us at **(+91) 9321-008-492**


HomeBasic is a registered trademark exclusively Licensed to **IRIS TECH**, India and its affiliated companies, and it is distributed by **IRIS TECH** through its channel partners. Other reference brands and trademarks are for demonstration only. All other trademarks included herein are the intellectual property of their respective owners.

Your support is appreciated! Share your joy and tag us on social media with your new item. Check out our extensive product lineup at **www.thehomebasic.com**.

 **Website:** www.TheHomeBasic.com

 **Instagram:** [/HomeBasicOfficial](https://www.instagram.com/HomeBasicOfficial)

 **Facebook:** [/HomeBasicOfficial](https://www.facebook.com/HomeBasicOfficial)


 **Twitter:** [@TheHomeBasic](https://twitter.com/TheHomeBasic)

LIST OF ITEMS

Thank you for choosing our products. If you are unpacking for the first time, please confirm the contents.

Contents:

- 1.Hair Dryer
- 2.Concentrator Nozzle
- 3.User Manual



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.


⚠ DANGER

- Please use it under the rated voltage of this product to ensure that the plug is fully inserted, otherwise it may cause personal injury such as electric shock.
- When the product is connected to a power source, it cannot be placed in an environment close to the water anyway.
- In the following cases, please unplug the power cord first, otherwise it may cause accidents:
 - After use every time;
 - When not using this product;
 - When cleaning and maintenance;
 - The appliance is working abnormally.

PRODUCT DIAGRAM

Magnetic Concentrator Nozzle

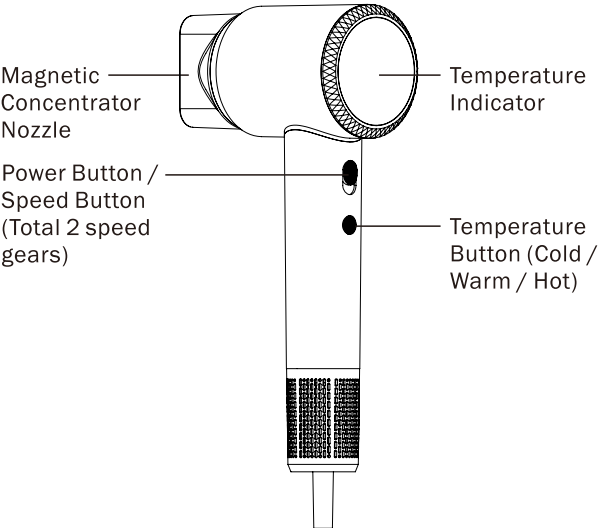

Power Button / Speed Button (Total 2 speed gears)



Temperature Indicator

Temperature Button (Cold / Warm / Hot)


Function Instructions

Button	Action	Function
 OFF 1 2	Slide the Button	Power Off / Change Speed, Total 2 Speeds
 1 2	Press Once	Switch Cold / Warm / Hot Temperature
	Long Press	Hot and Cold Wind Alternating Mode

Indicator Instructions

Indicator	Function
Blue Light	Cold Wind
Orange Light	Warm Wind
Red Light	Hot Wind
Flash Red and Blue Light	Hot and Cold Wind Alternation

PRODUCT USAGE



Warning!

Do not use in a bath or shower.

1.Towel Dry Your Hair: Before using a hair dryer, gently towel dry your hair to remove excess moisture. This reduces drying time and minimizes heat exposure.

2.Section Your Hair: Divide your hair into manageable sections using clips. This allows for more controlled drying and styling, ensuring even results.

3.Choose The Right Attachment: Attach the appropriate nozzle to your hair dryer based on your desired style. A concentrator nozzle focuses the airflow for sleek, straight looks.

4.Select The Right Heat And Speed Settings: Choose a heat setting suitable for your hair type. Use a lower heat setting for fine or damaged hair and a higher setting for thick or coarse hair. Start with a lower speed setting and increase as needed.

5.Dry From Roots To Ends: Begin drying your hair from the roots, moving the dryer down toward the ends. Hold the dryer about 10cm away from your hair to avoid excessive heat exposure. Keep the dryer constantly moving to prevent any one spot from overheating.

6.Use A Brush For Styling: Use a round or paddle brush to style your hair as you dry. For volume, lift the roots with the brush while directing the airflow towards them. For smooth, straight styles, pull the brush downward while following with the dryer.

7.Cool Down With The Temperature Button: Once your hair is dry and styled, use the temperature button to make hair dryer blow cool air to set your style. The blast of cool air helps to lock in shine and reduce frizz.

8. Finish with Hair Products: Finish with a light mist of hairspray, shine serum, or anti-frizz spray to maintain your style and add extra shine.

9.Turn Off and Unplug: After use, turn off the hair dryer and unplug it. Allow it to cool down before storing it in a safe, dry place.

Tips for Best Results:

- Avoid Over-Drying: Do not over-dry your hair, as this can lead to dryness and damage.
- Maintain Distance: Always keep the hair dryer at least 10cm away from your scalp to prevent burning your scalp or overheating your hair.
- Regular Maintenance: Clean the air filter regularly to maintain optimal performance and extend the life of your hair dryer.

Overheat Protection

HomeBasic hair dryer **Luxe Pro** will automatically power off when overheated. Please unplug this product and let product cool down for a few minutes. Before turn on the product again, check the air inlet and outlet to make sure it is free of fluff, hair, etc.

Product Parameters

Product	Hair Dryer
Product Model	HB-04
Rated Voltage	220V-240V ~
Rated Frequency	50-60Hz
Rated Power	2000W
RPM	110,000
Cable Length	Approx. 1.9 m
Product Dimension (Not included concentrator nozzle)	Approx. 250 x 95 x 73 mm
Product Weight (Included Cable)	Approx. 475 g

CLEANING AND MAINTANCE

- Before cleaning, please shut down and pull out the power plug.
- This product is not waterproof, do not immerse the appliance in water .
- Do not use steel wire brush, abrasive cleaner or corrosive liquid (such as gasoline or acetone) or chemical to clean the product.
- Clean with a soft wet cloth and wipe with a soft dry cloth.
- Do not place products that have not been completely cooled in bags.

STORAGE

- Please store the product in original packaging if long time not use.
- Please keep it out of the children's reach.
- Please keep it in a cool, dry place away from moisture.
- Please do not store this product in a humid environment.
- Please avoid storing the product in a place with high temperature or direct sunlight.

SAFETY INSTRUCTION

- Always read the user manual thoroughly before using the product.
- Do not immerse the product in water.
- Do not use this product in a bath or shower.
- Do not transform, disassemble or repair the product by yourself.
- Do not knock or drop the product. If the product is damaged due to collision or fall, please stop using it.
- Do not use in the vicinity of petroleum gas or other flammable materials (such as volatile agent, paint thinner, spray, etc.), in order to avoid explosion and fire.
- Do not cover the outlet and entrance when using, otherwise it will lead to combustion or mechanical damage.
- Do not use a hair dryer near braids, paper or other flammable materials, as this could cause a fire.
- Always unplug the hair dryer when it is not in use, when cleaning it, or when you leave it unattended.
- Regularly clean the vent of the hair dryer to remove any dust, lint, or hair that may accumulate and cause the device to overheat.
- To avoid damage to the power cable, do not wrap the power cable around the product.