


展开尺寸：285x210mm 成品尺寸：95x210mm 128g书写纸双面单黑印刷 荷包折

封面

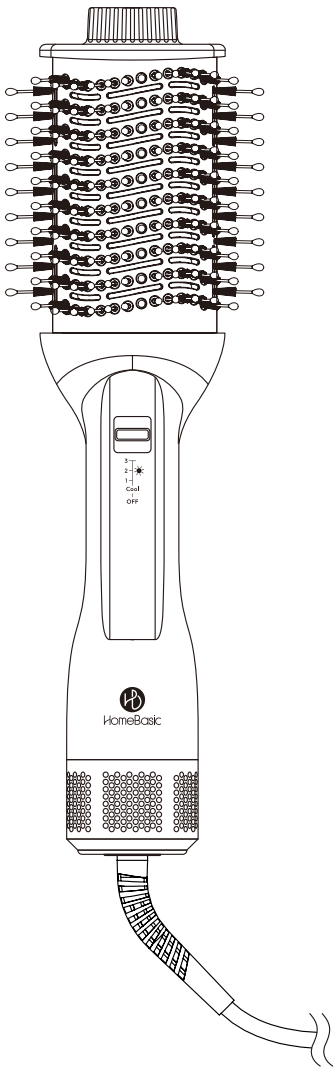

封底



Experience the HomeBasic difference: durability and dependable service. Our products are engineered for longevity and backed by a comprehensive warranty.



SCAN ME

Don't hesitate to contact us! We're happy to answer your questions.
Prefer email? Send your questions to support@thehomebasic.com.
Need to speak with someone? Call us at **(+91) 9321-008-492**

HomeBasic is a registered trademark exclusively Licensed to **IRIS TECH**, India and its affiliated companies, and it is distributed by **IRIS TECH** through its channel partners. Other reference brands and trademarks are for demonstration only. All other trademarks included herein are the intellectual property of their respective owners.

Your support is appreciated! Share your joy and tag us on social media with your new item. Check out our extensive product lineup at www.thehomebasic.com.

Website: www.TheHomeBasic.com

Instagram: /HomeBasicOfficial

Facebook: /HomeBasicOfficial

Twitter: @TheHomeBasic

LIST OF ITEMS

Thank you for choosing our products. If you are unpacking for the first time, please confirm the contents.

Contents:

1. Professional Volume Enhancing Hair Dryer
2. User Manual




Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

⚠ DANGER

- Please use it under the rated voltage of this product to ensure that the plug is fully inserted, otherwise it may cause personal injury such as electric shock.
- When the product is connected to a power source, it cannot be placed in an environment close to the water anyway.
- In the following cases, please unplug the power cord first, otherwise it may cause accidents:
 - After use every time;
 - When not using this product;
 - When cleaning and maintenance;
 - The appliance is working abnormally.

PRODUCT DIAGRAM

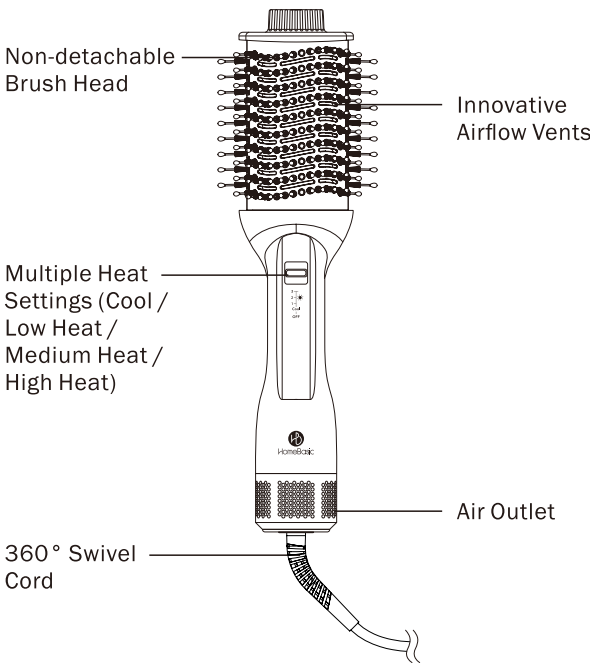

PRODUCT USAGE

- Warning!**
Do not use in a bath or shower.

NOTICE

- Don't leave the brush in one spot for too long to avoid heat damage.
- During the first few minutes of initial use you may notice smoke and a slight odor. This is normal and will quickly disappear.

1. Towel dry your hair: Before using this product, gently towel dry your hair to remove excess moisture. This reduces drying time and minimizes heat exposure. Use a comb or a brush to remove any knots.

2. Section your hair: Split your hair into small sections (about 4-6). Use clips to hold each section aside. Working in small sections gives you better control and a smoother result.

3. Select the right heat: Choose a heat setting suitable for your hair type and start with a lower speed setting and increase as needed.

- **Low heat:** For fine or thin hair.
- **Medium heat:** For normal hair.
- **High heat:** For thick or coarse hair.
- **Cool setting:** To set the style or to avoid using heat at all.

4. Styling your hair:

- **Starting at the roots:** Place the volumizer brush close to your roots. Hold it there for a few seconds to add volume.
- **Rotate and pull through:** Slowly rotate the brush while pulling it through your hair down to the ends. This will help smooth and style your hair.

- ▶ For volume: Focus on lifting the brush at the roots while drying.
- ▶ For curls: Wrap the ends around the brush and hold for a few seconds before releasing.
- ▶ For straightening: Pull the brush straight down from root to tip without rotating.

5. Cool down with the temperature button: Once your hair is dry and styled, use the temperature button to make hair dryer blow cool air to set your style. The blast of cool air helps to lock in shine and reduce frizz.

6. Finish with Hair Products: Finish with a light mist of hairspray, shine serum, or anti-frizz spray to maintain your style and add extra shine.

7. Turn Off and Unplug: After use, turn off the product and unplug it. Allow it to cool down before storing it in a safe, dry place.

Overheat Protection

HomeBasic professional volume enhancing hair dryer HB-S200 will automatically power off when overheated. Please unplug this product and let product cool down for a few minutes. Before turn on the product again, check the air vent to make sure it is free of fluff, hair, etc.

PRODUCT PARAMETERS

Product	Professional Volume Enhancing Hair Dryer
Product Model	HB-S200
Rated Voltage	220V ~
Rated Frequency	50Hz
Rated Power	1200W
Motor Speed	35,000 RPM
Cable Length (Included Plug)	Approx. 2 m
Product Dimension	Approx. 350 x 110 x 90 mm
Product Weight (Included Cable)	Approx. 580 g

CLEANING AND MAINTANCE

- Before cleaning, please shut down and pull out the power plug.
- This product is not waterproof, do not immerse the appliance in water .
- Do not use steel wire brush, abrasive cleaner or corrosive liquid (such as gasoline or acetone) or chemical to clean the product.
- Clean with a soft wet cloth and wipe with a soft dry cloth.
- Use a fine-tooth comb or your fingers to remove any hair caught in the brush.

STORAGE

- Please store the product in original packaging if long time not use.
- Please keep it out of the children's reach.
- Please keep it in a cool, dry place away from moisture.
- Please do not store this product in a humid environment.
- Please avoid storing the product in a place with high temperature or direct sunlight.

SAFETY INSTRUCTION

- Always read the user manual thoroughly before using the product.
- Do not immerse the product in water.
- Do not use this product in a bath or shower. It's important to install ground fault circuit interrupters for you if you stick to use it in bathroom.
- Do not transform, disassemble or repair the product by yourself.
- Do not knock or drop the product. If the product is damaged due to collision or fall, please stop using it.
- Do not knock or drop the product. If the product is damaged due to collision or fall, please stop using it.
- Do not cover the outlet and entrance when using, otherwise it will lead to combustion or mechanical damage.
- Do not use the product on the highest heat setting for extended periods. This can cause damage over time.
- Always unplug the product when it is not in use, when cleaning it, or when you leave it unattended.
- Limit the use of heavy styling products that can build up on the brush and create a fire hazard.
- Regularly clean the vent of the product to remove any dust, lint, or hair that may accumulate and cause the device to overheat.
- To avoid damage to the power cable, do not wrap the power cable around the product.
- Regularly inspect the power cord for any signs of wear or damage. If you notice fraying or exposure, it may need to be replaced.