展开尺寸: 280x140mm 128g书写纸双面单黑印刷 风琴折

封面 →


LIST OF ITEMS

Thank you for choosing our products. If you are unpacking for the first time, please confirm the

Contents:

- 1.Portable Blender 2.Cup Base
- 3.Straw 4.USB-C Charging Cable
- 5.User Manual

PRODUCT FUNCTION DIAGRAM

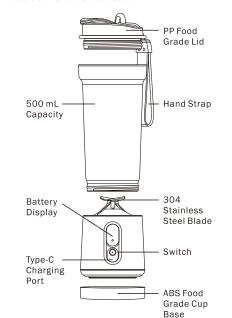

OPERATION INSTRUCTION



1. Remove skin and nuts, cut fruits to several pieces, place the fruit in the cup. Please don't more than the Max.



2. Pour water /milk / any liquid, not more than the Max. (Do not grind without any liquid)



3. Tighten the cup and the lid, the blue light flashes, incline the machine to the angle of 45°, press the switch to turn on. (When you first time to press switch, it will display the battery. Press it again, blender will



4.Stir at a tilt and shake the juicer



5.40 seconds automatic mixing,

NOTE: When not use blender in about 20 minutes. the product will turn off automatically.

Mission Statement:

At HomeBasic, the profound impact of child trafficking has deeply touched our founders, igniting a steadfast commitment to fight this grave crime against Humanity.

riven by this purpose, we have vowed to allocate 1% of our gross sales to support leading organizations dedicated to rescuing and rehabilitating children from human trafficking. This contribution is our collective effort to

Your support through our products directly fuels this mission. You don't need to take any additional steps—you urchase already makes a difference. For those who wish to

Together, we can build a future where every child is safe, cherished, and free. Let's support this cause, as God's Children are not for sale!!

Experience the HomeBasic difference: durability and dependable service. Our products are engineered for longevity and backed by a comprehensive



SCAN ME

Don't hesitate to contact us! We're happy to answer your questions Prefer email? Send your questions to support@thehomebasic.com. Need to speak with someone? Call us at (+91) 9321-008-492

HomeBasic is a registered trademark of IRIS TECH and its affiliated companies and is distributed by IRIS TECH through its channel partners.

Other reference brands and trademarks are for demonstration only.

All other trademarks included herein are the intellectual property of their respective owners.

Your support is appreciated! Share your joy and tag us on social media





PRODUCT SPECIFICATION

Product Name	Portable Blender
Model No.	R100
Base Shell Material	ABS
Blade Material	304 Stainless Steel
Bottle Material	AS food grade
Bottle Capacity	500 mL
Working Voltage	7.4V
Maximum Power	300W
RPM	18,000 RPM
Battery Capacity	2000mAh * 2
Charging Time	2~3 Hours
Indicator	Charging: Red Light Fully Charging: Green Light
Single Working Time	Approx. 40 Seconds
Idle Protection	3 Seconds Off

CHARGING PROCEDURE

Use the USB data cable that comes with the original computer or car USB for charging. Charging time 2-3 hours can be full, gently plug and unplug the Type-C end when charging, to avoid damage.

- 1. Plug the Type-C end of the USB cable into the socket on the base of the juicer.
 2. Plug the USB end of the charging cable into the
- adapter, mobile power supply, and USB interface of the computer to charge.

Note: The red light is on when charging, and the green light is on after charging is completed. Make sure that the socket is plugged properly. If the machine cannot be charged or the power light does not turn on when charging, please refer to the troubleshooting guide.

FAULT AND TROUBLESHOOTING METHODS

Fault phenomenon	Cause analysis	Troubleshooting method
The battery light blinks periodically	Low power	Charge for 2-3 hours
The power indicator is blinking and does not work	The body and the base are not tight.	The red and blue light flashes after the body and base are tightened.
Empty load is normal. Juicing starts to stop working	Excessive food specifications, excessive food quantity, ice or food stuck blade, resulting in motor overload protection.	Remove the stuck food and pour in the standard amount of solid food, adding enough water or milk.
Leak	The cup body and lid are not tightened,the seal ring is missing.	Check the installation seal ring.

PRODUCT FEATURES

• Powerful and Efficient Blending: The HomeBasic R100 Portable Blender boasts a robust 300W motor and an innovative extended cyclone blade system, reaching speeds of up to 18,000 RPM. This powerhouse effortlessly transforms ice, frozen just 40 seconds.

Extended Battery Life with Convenient Type-C

Charging: The 4000mAh battery charges quickly in just 2-3 hours, providing enough power for up to 30 cups of fresh juice. The versatile Type-C charging port allows you to connect to any USB power source, including power banks, laptops, car chargers, or wall adapters.

Enhanced Waterproof Design for Easy Cleaning:

The HomeBasic R100 Portable Blender features upgraded waterproof technology that effectively safeguards the motor base from water damage during cleaning. For optimal safety, avoid submerging the unit completely.

• Optimal Capacity and Leak-Proof Design: The 500ml BPA-free, food-grade AS blender cup offers the perfect personal size for shakes and smoothies. The secure design prevents leaks, $\,$ while the anti-slip base ensures stability during

• Food-Grade Materials and Safety Features:

Constructed from BPA-free, food-grade AS material, the HomeBasic R100 Portable Blender prioritizes your health and safety. Additionally, the automatic shut-off function prevents operation when the body and base are not properly assembled.

- Clear Battery Level Display: The intuitive battery level display keeps you informed, preventing unexpected power outages that could disrupt your blending process.
- Comprehensive Warranty and Support: The HomeBasic R100 Portable Blender comes with a generous 6-month Warranty, and a complete accessory package including a blender, fabric handle, travel bottom cover, silicone straws, a charging cable, and a user manual. Our dedicated team is readily available to assist you with any

SAFETY INSTRUCTIONS

- Always read the user manual thoroughly before using the blender.
- Ensure the blender is placed on a stable, flat surface to prevent tipping.
- Always secure the lid tightly before blending to avoid spills and splashes.
- Do not fill the blender beyond its maximum capacity
- to prevent overflow.

 Allow hot liquids to cool before blending to avoid
- steam buildup and potential burns. Always unplug the blender when it's not in use, and before cleaning or assembling.
- The blades are sharp. Handle them carefully to
- avoid injury.
 Ensure the blender is out of reach of children to prevent accidents.
- Do not immerse the motor base in water or any other liquid.
- This product is not suitable for mincing meat, and it is not recommended to directly break ice without adding liquid, otherwise it will affect the service life.
- After 3 cycles of continuous operation, please stop the machine for 5-10 minutes and use it after the motor cools down to avoid damage caused by over heating of the motor.
- If you do not use it for a long time, please charge it every three months to prevent battery damage.
- Please drink the squeezed juice in time. It is strictly forbidden to place it in the container for more than 6 hours to prevent the juice from being oxidized and not fresh, so it will rot and produce peculiar



