
展开尺寸: 350x105mm 成品尺寸: 70x105mm 128g书写纸双面单黑印刷 风琴折

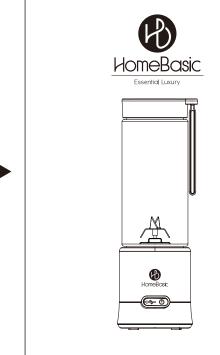


Thank you for choosing our products. If you are unpacking for the first time, please confirm the contents.

1.Portable Blender 2.Cup Base 3.USB-C Charging Cable 4.User Manual



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must

PRODUCT DIAGRAM

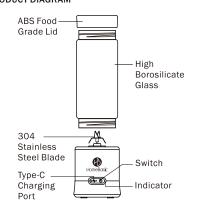

Indicator Light Instruction

- Blending function: Press the switch and hold for 2 seconds. The blender will start automatically and the white light will be on. After 45 seconds the machine will stop automatically.
- Crush ice function: Press the switch twice continuously. The blender will started automatically and the white light will be on. After 45 seconds the machine will stop automatically.
- When charging the machine, the red light will be on. When the machine is fully charged and ready, the white light will be on.
- When the cup is separated from the base or not installed correctly, the blender will not work and the red light will flash 5 times.(indicating that it will not
- When it is charging ,the machine will not work no matter how many you press the switch button.
- If any food overloads or blocks the blender from working during operation. It will stop automatically and the red and white lights will flash alternately.
- The red light will flash 10 times when the battery has no power. Please charge the machine.

OPERATION INSTRUCTION

NOTICE

- When you first time to use this machine, please fully charge it until the white indicator light will be on. Please check that both the lid and base have the
- silicone rings in place. Before each use, always check the glass jar for any cracks, chips, or damage. Even small cracks can cause the jar to shatter during use.

Blending Function Instruction

- 1. Cut food to several pieces, remove skin and nut. (around 1.5-2.0cm)
- 2. Pour water / milk / any liquid, not more than 2/3 of this cup. (Do not grind without any liquid) 3. Incline the machine to the angle of 45°, and then
- start the machine by pressing the switch for 2 seconds. 4. Upside down the blender and shake the bottle gently to make it more delicious.

Crush Ice Instruction

- 1. Ready 40-45g ice cube (around 1.5-2.5cm length/ width/height)
- 2. Put the ice cube into the container.
- 3. Incline the machine to the angle of 45°, and then start the machine by pressing the switch twice continuously.
- 4. Upside down the blender and shake the bottle gently for better blending.

CHARGING PROCEDURE

Use the USB data cable that comes with the original machine to connect the adapter, mobile power supply, computer or car USB for charging. Charging time 3~5 hours can be full, gently plug and unplug the Type-C end when charging, to avoid damage.

- 1. Plug the Type-C end of the USB cable into the socket on the base of the juicer.
- 2 Plug the USB end of the charging cable into the adapter, mobile power supply, and USB interface of the computer to charge.
- Note: The red light is on when charging, and the white light is on after charging is completed. Make sure that the socket is plugged properly

PRODUCT PARAMETERS

Product	Portable Blender	
Model No.	R200	
Base Shell Material	ABS	
Blade Material	304 Stainless Steel	
Bottle Material	High Borosilicate Glass	
Bottle Capacity	450 mL	
Working Voltage	7.4V	
Rated Power	126W	
RPM	16,500 RPM	
Battery Capacity	2000mAh * 2	
Charging Time	3~5 Hours	
Indicator	Charging: Red Light Fully Charging: White Light	
Single Working Time	Approx. 45 Seconds	
Weight (Included Charging Cable)	Approx. 712 g	
Dimensions	Approx. 243 x 80 x 80 mm	



Experience the HomeBasic difference: durability and

Our products are engineered for longevity and backed by a comprehensive warranty.



Don't hesitate to contact us! We're happy to answer your questions.

Prefer email? Send your questions to

SCAN ME (+91) 9321-008-492

support@thehomebasic.com.
Need to speak with someone? Call us at

HomeBasic is a registered trademark exclusively

Licensed to IRIS TECH. India and its affiliated companies, and it is distributed by IRIS TECH through its channel partners. Other reference brands and trademarks are for

demonstration only. All other trademarks included herein are the intellectual property of their

Your support is appreciated! Share your joy and tag us on social media with your new item. Check out our extensive product lineup at www.thehomebasic.com

Website: www.TheHomeBasic.com

Instagram: / HomeBasicOfficial

Facebook: / HomeBasicOfficial

X Twitter: @TheHomeBasic

FAULT AND TROUBLESHOOTING METHODS

Fault phenomenon	Cause analysis	Troubleshooting method
The red light flashes 5 times but the machine doesn't work.	The container is not correctly installed on the base.	Please re-install again.
The machine doesn't work and the red light is flashes 10 times.	Battery quantity is not enough or no power.	Please charge the machine for 3-5 hours.
The machine stops during operation.	Too little food or too much. Either will cause the machine to stop for protection.	Please add or reduce some food and re-start the machine.
The red and white light will flash 10 times during operation.	The motor has locked.	If there isn't any food blockage, please re-start again.
Leaking water.	The silicone part is not installed correctly.	Please re-install silicone part.
There is some smoke when using.	Long time using, the machine is overheated and protected automatically.	Please cool dowr the machine for 30-60 mins and then start again.

STORAGE

- Please store the product in original packaging if long time not use.
- Please keep it out of the children's reach. • Please store it in a cool, dry place at room
- Please store it in a secure location to avoid accidental knocking, which could cause damage.
- While high boron glass can withstand heat, it's best not to store it in areas with extreme temperature fluctuations (like near a stove or direct sunlight).

SAFFTY INSTRUCTION

- Always read the user manual thoroughly before using the blender.
- Ensure the blender is placed on a stable, flat surface to prevent tipping.
- Always secure the lid tightly before blending to avoid spills and splashes.
- Allow hot liquids to cool before blending to avoid steam buildup and potential burns.
- The blades are sharp. Handle them carefully to avoid
- Ensure the blender is out of reach of children to prevent accidents
- Handle the glass container with dry hands to prevent slips or dropping. • Do not fill the blender beyond its maximum capacity to
- prevent overflow. • Do not immerse the motor base in water or any other
- Do not use this machine for grinding hard dry ingredients like nuts, coffee, bean etc. This will damage the machine and reduce its operational life.

- High boron glass is resistant to heat, but avoid pouring boiling liquids directly into a cold juicer or vice versa, as sudden temperature changes can weaken or break the glass.
- After 3 cycles of continuous operation, please stop the machine for 5-10 minutes and use it after the motor cools down to avoid damage caused by overheating of the motor.
- If you do not use it for a long time, please charge it every three months to prevent battery damage.
- Please drink the squeezed juice in time. It is strictly forbidden to place it in the container for more than 6 hours to prevent the juice from being oxidized and not fresh, so it will rot and produce peculiar smell.



