


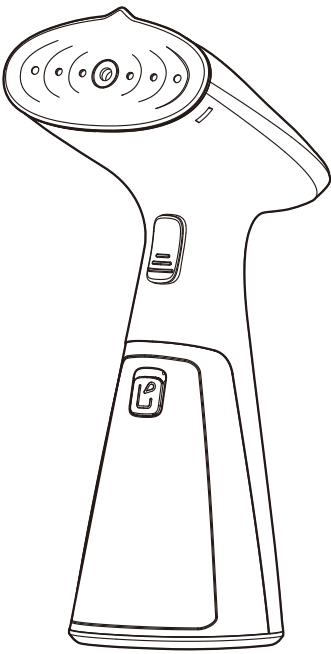 
展开尺寸：280x140mm 128g书写纸双面单黑印刷 风琴折

封面



HomeBasic

Essential Luxury



 
LIST OF ITEMS

Thank you for choosing our products. If you are unpacking for the first time, please confirm the contents.



Contents:


- 1.Steam Iron
- 2.Brush
- 3.Measuring Cup
- 4.User Manual

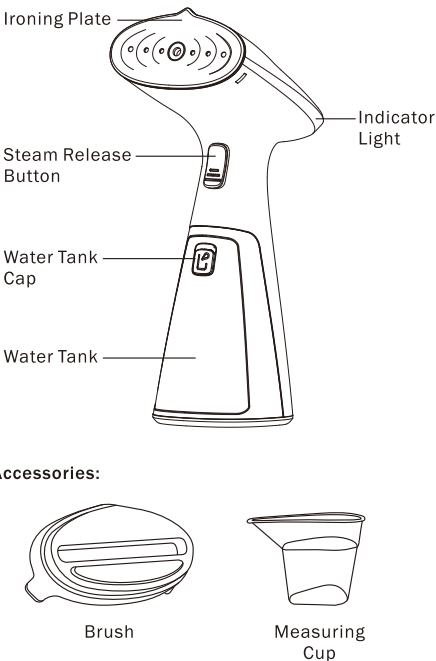PRODUCT DIAGRAM




Accessories:





Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.




CAUTION RISK OF BURNS!

- The surface marked with warning symbol will become very hot during use. Do not touch these parts until the product has cooled down.
- The iron emits steam which can cause burns: be careful not to come into contact while ironing.
- Never try to iron clothes worn on a person: the steam is very hot and could cause serious burns.
- Do not come into contact with the water that comes out of the plate as it is hot and could cause burn.

OPERATION INSTRUCTION

1.Filling Water Tank





WARNING


- Remove the plug from the socket before filling the water tank. Once the water has been filled, dry the tank with a dry cloth.
- Never fill the water tank above the MAX level.
- Fill the water tank with purified water. Never add detergents, perfumers chemical additives or descalers.

(1)Open the water tank cap.

(2)Fill the tank with purified water up to the MAX level using the measuring cup supplied. Do not turn the steam iron upside down when filling water.

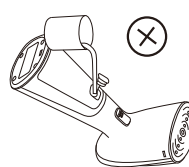


(3)Close the water tank cap and wipe the tank with a dry cloth.



WARRANTY REGISTRATION

Experience the HomeBasic difference: durability and dependable service.

Our products are engineered for longevity and backed by a comprehensive warranty.



SCAN ME

Don't hesitate to contact us! We're happy to answer your questions.


Prefer email? Send your questions to **support@thehomebasic.com**.

Need to speak with someone? Call us at **(+91) 9321-008-492**


HomeBasic is a registered trademark exclusively Licensed to **IRIS TECH**, India and its affiliated companies, and it is distributed by **IRIS TECH** through its channel partners.

Other reference brands and trademarks are for demonstration only. All other trademarks included herein are the intellectual property of their respective owners.


Your support is appreciated! Share your joy and tag us on social media with your new item. Check out our extensive product lineup at www.thehomebasic.com.




Website: www.TheHomeBasic.com



Instagram: /HomeBasicOfficial



Facebook: /HomeBasicOfficial




Twitter: @TheHomeBasic

封底

2.Mount The Brush


When need the brush, hold the handle of the steam iron with your hand and install the brush on the steam nozzle with your other hand. When installed correctly, it will make a "click" sound. **Note: Unplug it from power outlet when install or removal of any accessories.**




3.Start Using

(1)Plug it into power outlet and the indicator light will light up green. Waiting 40 seconds to preheat.

(2)Press the button and keep it pressed to allow steam delivery. When the button is released, the pump stops working and the steam stops coming out.



(3)Place the garment on a hanger. Pass the appliance over the garment.



NOTICE

Use the appliance only with vertical movements from the bottom upwards and vice versa. Do not use the appliance in position horizontal or upside down, with the nozzles facing down.

PRODUCT PARAMETERS

Product Model NO.	HB-V500
Rated Voltage	220V ~
Rated Frequency	50 Hz
Rated Power	1000 W
Water Capacity	120 mL
Versatile For Most Fabrics	Silk, Wool, Cotton, Linen, Chiffon
Safety Protection	Thermostat protection: The machine will power off automatically when the heating element exceeds 160°C.

FAULT AND TROUBLESHOOTING METHODS

Fault phenomenon	Troubleshooting method
Steam iron don't release steam.	1.Check the water level of the tank is higher than the lowest water level; 2.Check that the pump is working when the steam button is pressed.
Water is leaked from the tank.	1.Ensure that the water does not exceed the maximum water level; 2.Make sure the water tank cap is installed correctly; 3.Always hold hanging the iron in upright position.
The steam iron has a loud hum when it works or the sound of pumping.	Check the water tank, if don't have water or less than lowest water level, please fill the water up to MAX level.

SAFETY INSTRUCTIONS

- Always read the user manual thoroughly before using the steam iron.
- Always unplug the appliance from the power socket outlet after use and before cleaning.
- Do not use the appliance if it has fallen down or if it shows signs of damage, water leakage or defects that alter its operation.
- Do not use the product if power cord is damaged; the power cord should never be replaced by the user.
- Do not use the steam iron if it is accidentally dropped or if it has visible damage or water leaks.
- Never pull the power cord or the product itself to disconnect the plug from the socket.
- Never immerse the device in water or other liquids.
- Before and during use, make sure that the work surface is stable and heat resistant.
- Before carrying out any cleaning operation, disconnect the plug from the socket and wait until the iron has cooled down completely.

MAINTAIN

- 1.After use, unplug and cool down the product for at least 60 minutes.
- 2.Be sure to empty the water tank after use.
- 3.Drying the product with a towel, store product in a dry space.
- 4.Always ensure that the steam outlet is clean, free of dirt, and not blocked.