


展开尺寸：210x140mm 128g书写纸双面单黑印刷 风琴折

封面

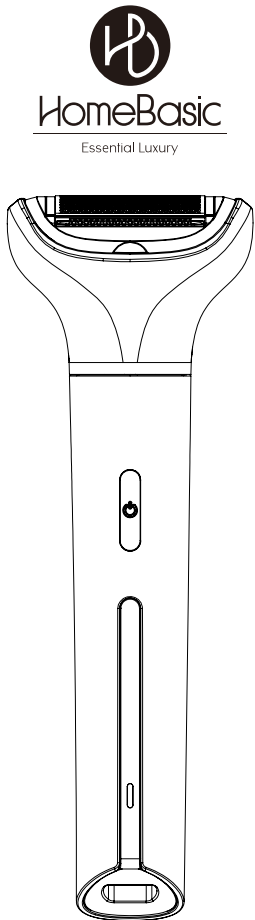

LIST OF ITEMS

Thank you for choosing our products. If you are unpacking for the first time, please confirm the contents.


Contents:

- 1.Shaver Host
- 2.5 Trimmer Heads
- 3.Cleaning Brush
- 4.Type-C Charging Cable
- 5.User Manual



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

PRODUCT DIAGRAM

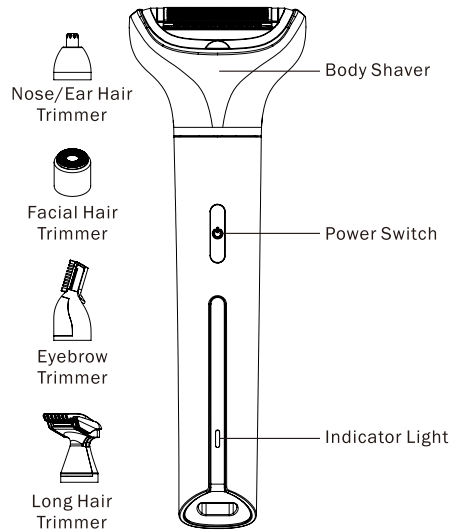

PRODUCT USAGE

Remove the blade cap, and select the appropriate trimming head. Press the power switch to turn on the groomer, carefully place blade of groomer to your nose hair, ear hair, beard etc.

(A)Nose/Ear Hair Trimmer

- 1.The Nose Trimmer is designed to remove unwanted hair from the nose or ear areas.
- 2.Gently approach the area to be trimmed, never force the Nose Trimmer into nose or ear cavities as this can result in injury.
- 3.If you feel any pain or discomfort when using this product, stop using it immediately.
- 4.Always clean the trimmer after use and use the cap to protect the Nose Trimmer head.

(B)Long Hair Trimmer / Eyebrow Trimmer

You can use this attachment for trimming unwanted eyebrow hair, fine facial and ear hair, or private part and any stray body hair.

(C)Facial Hair Trimmer / Body Shaver

- 1.Press the power switch, turn on the product.
- 2.Move the razor head on the skin against the main direction of beard growth and make straight and circuitous movements.
- 3.For best results, gently moving the groomer across the skin.
- 4.Turn off the product after using it.

SHAVER HAED REPLACEMENT

To change attachments, hold the trimmer body with the switch side facing towards you. Rotate the attachment and pull off. Position the replacement attachment at the top of the trimmer body, then rotate and push down.

封底



Experience the HomeBasic difference: durability and dependable service.
Our products are engineered for longevity and backed by a comprehensive warranty.



Don't hesitate to contact us! We're happy to answer your questions.
Prefer email? Send your questions to support@thehomebasic.com.
Need to speak with someone? Call us at (+91) 9321-008-492

HomeBasic is a registered trademark exclusively Licensed to IRIS TECH, India and its affiliated companies, and it is distributed by IRIS TECH through its channel partners.
Other reference brands and trademarks are for demonstration only. All other trademarks included herein are the intellectual property of their respective owners.

Your support is appreciated! Share your joy and tag us on social media with your new item. Check out our extensive product lineup at www.thehomebasic.com.



Website: www.TheHomeBasic.com



Instagram: [/HomeBasicOfficial](https://www.instagram.com/HomeBasicOfficial)



Facebook: [/HomeBasicOfficial](https://www.facebook.com/HomeBasicOfficial)



Twitter: [@TheHomeBasic](https://twitter.com/TheHomeBasic)

PRODUCT PARAMETERS

Product Name	Precision Facial Trimmer
Product Model	HB-G1
Input	5V $\overline{=}$ 1A
Rated Power	5W
IPX	IPX5
Battery Capacity	500 mAh
Charging Port	Type-C
Charging Time	Approx. 70 Minutes
Run Time	Approx. 60 Minutes
Indicator Light	Using: Blue Light Charging: Red Light Low Battery: Flash Red Light Fully Charging: Blue Light

CLEANING AND MAINTENCE

- Turn off and unplug the groomer before cleaning.
- Clean the trimming heads by using the cleaning brush provided.
- Do not immerse the main unit in water.
- Do not use steel wire brush, abrasive cleaner or corrosive liquid (such as gasoline or acetone) or chemical to clean the product.
- Dry all parts thoroughly before reassembling or storing.
- Store the groomer in a cool, dry place, ideally in the travel pouch.

SAFETY INSTRUCTIONS

- Always read the user manual thoroughly before using the product.
- Supervise the child to make sure they don't play with the appliance.
- Do not use the groomer on irritated or broken skin. Discontinue use if irritation occurs.
- To avoid electric shock or damage, do not use the groomer while it is plugged in and charging.

- The groomer is designed for trimming hair on the face and body. Do not use it for any other purposes.
- Before each use, inspect the groomer for any damage or wear. Do not use the device if it has a damaged blade, cord, or casing.
- Always attach the correct trimming head for the area you plan to groom. Using the wrong attachment may result in skin irritation or ineffective trim ming.
- If the groomer becomes excessively hot during use, turn it off and allow it to cool down before continuing. Overheating can cause discomfort or burns.
- Be cautious when grooming around the face to avoid accidental contact with your eyes.
- Clean the groomer and its attachments after each use to prevent the build-up of hair and bacteria, which can lead to skin irritation or infection.