


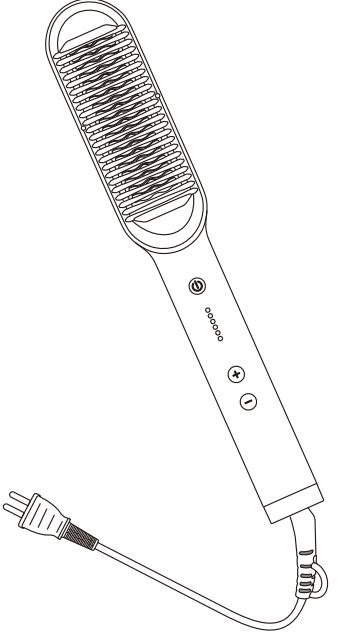 
展开尺寸：350x140mm 128g书写纸双面单黑印刷 风琴折

封面





HomeBasic
Essential Luxury



 
LIST OF ITEMS

Thank you for choosing our products. If you are unpacking for the first time, please confirm the contents.

Contents:

- 1.Hair Straightener
- 2.Heatproof Glove
- 3.Pouch Bag
- 4.User Manual

PRODUCT DIAGRAM

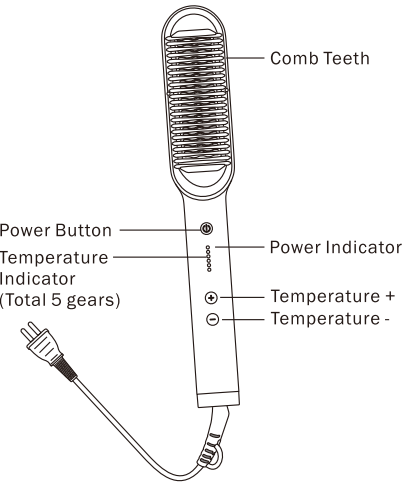

Tips: When using this hair comb, you must ensure that the hair is dry, otherwise you will not achieve the desired shape or effect.

FUNCTION INSTRUCTION

Power Indicator

- The blue light flashes, indicating that the hair straightener has been plugged in and is in standby mode.
- The blue light keeps on, indicating that the comb is on and heating up.


Temperature Indicator

- From bottom to top, the temperatures will be from low to high, a total of 5 strengths.
- The white light is flashing, it means comb is heating.
- The white light keeps on, indicating that the heating is completed, and you can use the hair straightener for styling.

Power Button & Temperature Adjustment Button		
Button	⊕	⊖
Action	Press once	Press once
Function	Switch on	Switch off
Indicator	Power indicator will keep blue light. Temperature strength is 4-gear by default.	Power indicator will flash blue light. Product stop heating and enter standby mode.
Button	⊕	⊖
Action	Press once	Press once
Function	Temperature +	Temperature -
Indicator	Set temperature rise, the corresponding temperature indicator will flash white light. Keep on white light when the temperature rises to the set value.	Set temperature down, the corresponding temperature indicator will flash white light. Keep on white light when the temperature down to the set value.

Timed Shutdown

This product is intelligent, energy efficient. After the machine is turned on for 30 minutes, it will automatically shutdown and enter standby mode. If you want to use it again, you can press the power button to reboot.

 
 Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

DANGER

- Please use it under the rated voltage of this product to ensure that the plug is fully inserted, otherwise it may cause personal injury such as electric shock.
- Do not use if you feel dull about heat, otherwise it may cause burns.
- When the product is connected to a power source, it cannot be placed in an environment close to the water anyway.
- In the following cases, please unplug the power cord first, otherwise it may cause accidents or even personal injury:
 - After use every time;
 - When not using this product;
 - When cleaning and maintenance;
 - The appliance is working abnormally.

USAGE INSTRUCTION

- Insert the plug into the power socket

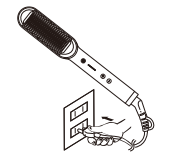

NOTICE:

- The plug must be fully inserted into the power outlet.
- Do not touch the metal part of the plug.
- Do not use inappropriate or loose sockets with your hands.

• Turn on and set temperature

- 1.Press the "⊕" button to turn on the hair straightener and it will start heating up. (The temperature level is default in 4-gear when power on.)
- 2.Press the "⊕" button or the "⊖" button on the panel to adjust the temperature. (Max level is 5-gear temperature strength.)

1st gear, suitable for the first time using this hair straightener, or soft and thin hair.

2nd gear, suitable for blonde, bleached or dyed hair.

3rd/ 4th gear, suitable for normal and slightly curled hair.

5th gear, suitable for very thick, curly and coarse hair.

NOTICE:

 
- When you use it for the first time or if you are not sure which temperature is suitable for you, please start using it at 1st gears and gradually increase the temperature by watching the combing effect.
- The wrong choice of temperature or the improper use of hair straightener will make your hair dry and burn in severe cases.

Tips:

When the comb is used, there may be a slight burnt smell. This is a smell that plastic meets high temperature. It is a normal phenomenon. Please feel free to use it. As the number of uses increases, the smell will become lighter and lighter.


• Power Off

- 1.Press and hold the power button for 1 seconds to turn off the power. (The power indicator will flash blue light.)
- 2.Pull out the power plug from the socket.

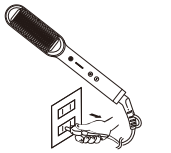


封底



 **WARRANTY REGISTRATION**

Experience the HomeBasic difference: durability and dependable service.

Our products are engineered for longevity and backed by a comprehensive warranty.



SCAN ME

Don't hesitate to contact us! We're happy to answer your questions.


Prefer email? Send your questions to support@thehomebasic.com.


Need to speak with someone? Call us at **(+91) 9321-008-492**


HomeBasic is a registered trademark exclusively Licensed to **IRIS TECH**, India and its affiliated companies, and it is distributed by **IRIS TECH** through its channel partners.


Other reference brands and trademarks are for demonstration only. All other trademarks included herein are the intellectual property of their respective owners.

Your support is appreciated! Share your joy and tag us on social media with your new item. Check out our extensive product lineup at www.thehomebasic.com.

 **Website:** www.TheHomeBasic.com

 **Instagram:** /HomeBasicOfficial

 **Facebook:** /HomeBasicOfficial

 **Twitter:** @TheHomeBasic


NOTICE:

- After turning off the power of the comb, do not touch or store the comb within 10 minutes, because even after the power is off, there will be high temperatures on the comb teeth.
- When unplugging, do not pull the power cord directly, or carry the hairbrush by pulling the power cord.

STYLE YOUR HAIR

- Basic Usage

- 1.Wash your hair and dry it, and comb your hair thoroughly. Then put a towel around your neck to prevent possible skin burns.
- 2.Divide the hair into even strands, hold and tighten. Starting from the root of the hair, place the prepared strands in the comb teeth and slowly and smoothly pull down from the root to the tip. (If the straightening effect is not satisfactory, you can repeat this step several times.)

 **Caution**

The comb staying in the same position of the hair should not exceed 5 seconds to avoid damage to the hair.

- Make Hair Inner Curls

According to the "basic usage" clip the hair from the inside and slowly slide it to the tips, then roll the tips in.(Rotate your wrist to the inside and wind it slowly, and stay for 3 seconds)

Tips: Flip your wrist from the root of the hair to the inside and slowly curl it up to the tip of the hair like a circle. ("C" shape)

- Final Hair Finishing

After the styling hair has cooled down, use a comb. You can use styling spray or styling gel.

PRODUCT PARAMETERS

Product Model NO.	HB-S100
Voltage	220V ~
Power	42W
Rated Frequency	50 Hz
Heating Method	PTC
Heating Temperature	Approx. 130°C~200°C
Product Dimensions	Approx. 310mm*46mm*45mm
Product Net Weight (With Cable)	Approx. 401g

CLEANING AND MAINTENANCE

- Before cleaning, please shut down and pull out the power plug.
- This product is not waterproof, do not soak the appliance in water or flush it directly with faucet.
- Do not use steel wire brush, abrasive cleaner or corrosive liquid (such as gasoline or acetone) or chemical to clean the product.
- Clean with a soft wet cloth or medical alcohol and wipe with a soft dry cloth.
- Do not place products that have not been completely cooled in bags.

STORAGE

- Please store the product in original packaging if long time not use.
- Please keep it out of the children's reach.
- Please keep it in a place with little moisture and dust.
- Please do not store this product in a humid environment.
- Please avoid storing the product in a place with high temperature or direct sunlight.

SAFETY INSTRUCTION

- Always read the user manual thoroughly before using the product.
- Supervise the child to make sure they don't play with the appliance.
- This appliance is not suitable for pet hair.
- Do not use in the shower or bath. Do not use this appliance near a bathtub, shower, washbasin or other utensils.
- Do not use this appliance near flammable or explosive materials, as this may result in fire or explosion.
- Do not drop or hit the appliance. If the appliance is damaged due to a fall or collision, do not use it.
- When pulling the plug, don't pull the power cord directly.
- Do not cover the appliance with any substance when using it.
- When the appliance is in use, the temperature of the surface of the comb may reach 200°C, so it is forbidden to place the appliance on a soft mat or blanket when it is still hot.
- When in use, the comb teeth become very hot. when the appliance is energized, it can't grasp or touch the comb teeth. Avoid contact between any hot parts and your skin and eyes.
- Do not use any flammable substances on your hair, such as hair styling, mousses, etc. before using this appliance.These materials may ignite when in contact with hot hair combs.
- Depending on your hair quality, the wrong choice of temperature or the improper use of hair straighteners will make your hair dry and burn in severe cases.